



WEAR INDICATOR

These rims have an indicator on both side walls. With more brake use, it loses depth and after a certain amount of time, it cannot be seen anymore. It is then time to exchange the rim in order to avoid accidents.