


VELO 65 MOUNTAIN



INDIVIDUAL SHORTENING OF THE REAR MUDGUARD


VELO 65 MOUNTAIN

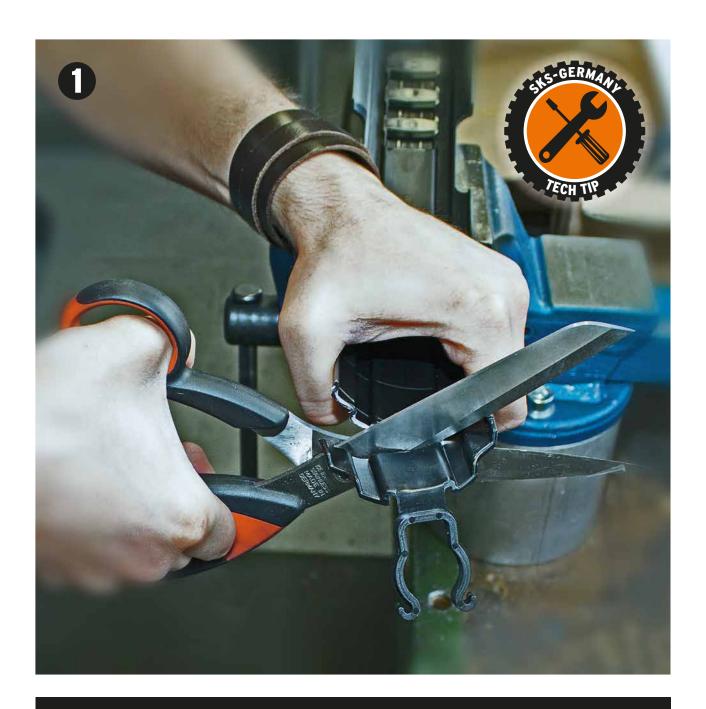





Firmly clamp the rear fender into a vice. Then cut or saw it straight off at one of the marks on the underside of the **VELO 65 MOUNTAIN** using a suitable tool.

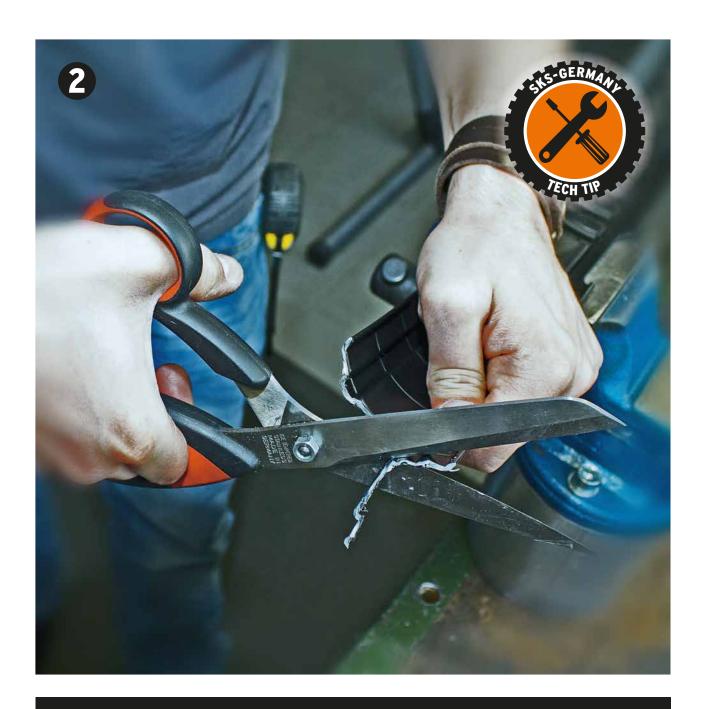

INDIVIDUAL SHORTENING OF THE REAR MUDGUARD

VELO 65 MOUNTAIN







In the second step, round the corners of the mudguard and remove any burrs, if necessary.